



Modell	A1	A2	X1	X2	Y1	Y2	D	H
<b>KDD 80Lx80R</b>	800	800	790-800	790-800	778-788	778-788	401	2000
<b>KDD 80Lx90R</b>	800	900	790-800	890-900	778-788	878-888	438	2000
<b>KDD 80Lx100R</b>	800	1000	790-800	990-1000	778-788	978-988	477	2000
<b>KDD 80Lx120R</b>	800	1200	790-800	1190-1200	778-788	1178-1188	560	2000
<b>KDD 90Lx80R</b>	900	800	890-900	790-800	878-888	778-788	438	2000
<b>KDD 90Lx90R</b>	900	900	890-900	890-900	878-888	878-888	472	2000
<b>KDD 90Lx100R</b>	900	1000	890-900	990-1000	878-888	978-988	509	2000
<b>KDD 90Lx120R</b>	900	1200	890-900	1190-1200	878-888	1178-1188	588	2000
<b>KDD 100Lx80R</b>	1000	800	990-1000	790-800	978-988	778-788	477	2000
<b>KDD 100Lx90R</b>	1000	900	990-1000	890-900	978-988	878-888	509	2000
<b>KDD 100Lx100R</b>	1000	1000	990-1000	990-1000	978-988	978-988	543	2000
<b>KDD 100Lx120R</b>	1000	1200	990-1000	1190-1200	978-988	1178-1188	618	2000
<b>KDD 120Lx80R</b>	1200	800	1190-1200	790-800	1178-1188	778-788	560	2000
<b>KDD 120Lx90R</b>	1200	900	1190-1200	890-900	1178-1188	878-888	588	2000
<b>KDD 120Lx100R</b>	1200	1000	1190-1200	990-1000	1178-1188	978-988	618	2000
<b>KDD 120Lx120R</b>	1200	1200	1190-1200	1190-1200	1178-1188	1178-1188	684	2000