



Modell	A1	A2	X1	X2	Y1	Y2	B1	B2	D	H
<i>KDD I 80Lx80R</i>	800	800	775-790	775-790	769-784	769-784	704	704	969	2000
<i>KDD I 80Lx90R</i>	800	900	775-790	875-890	769-784	869-884	704	804	1042	2000
<i>KDD I 80Lx100R</i>	800	1000	775-790	975-990	769-784	969-984	704	904	1119	2000
<i>KDD I 90Lx80R</i>	900	800	875-890	775-790	869-884	769-784	804	704	1042	2000
<i>KDD I 90Lx90R</i>	900	900	875-890	875-890	869-884	869-884	804	804	1110	2000
<i>KDD I 90Lx100R</i>	900	1000	875-890	975-990	869-884	969-984	804	904	1183	2000
<i>KDD I 100Lx80R</i>	1000	800	975-990	775-790	969-984	769-784	904	704	1119	2000
<i>KDD I 100Lx90R</i>	1000	900	975-990	875-890	969-984	869-884	904	804	1183	2000
<i>KDD I 100Lx100R</i>	1000	1000	975-990	975-990	969-984	969-984	904	904	1252	2000

