


Modell	A1	A2	X1	X2	Y1	Y2	Y3	B	Z	S	D	H
PTD 80x80	800	800	775-790	775-790	770-785	770-785	778-799	266	332-347	332-347	530	2000
PTD 90x90	900	900	875-890	875-890	870-885	870-885	920-941	266	432-447	432-447	530	2000
PTD 100x100	1000	1000	975-990	975-990	970-985	970-985	1061-1082	266	532-547	532-547	530	2000
PTD 80x90	800	900	775-790	875-890	770-785	870-885	849-870	266	332-347	432-447	530	2000
PTD 80x100	800	1000	775-790	975-990	770-785	970-985	920-941	266	332-347	532-547	530	2000
PTD 90x80	900	800	875-890	775-790	870-885	770-785	849-870	266	432-447	332-347	530	2000
PTD 90x100	900	1000	875-890	975-990	870-885	970-985	990-1011	266	432-447	532-547	530	2000
PTD 100x80	1000	800	975-990	775-790	970-985	770-785	920-941	266	532-547	332-347	530	2000
PTD 100x90	1000	900	975-990	875-890	970-985	870-885	990-1011	266	532-547	432-447	530	2000

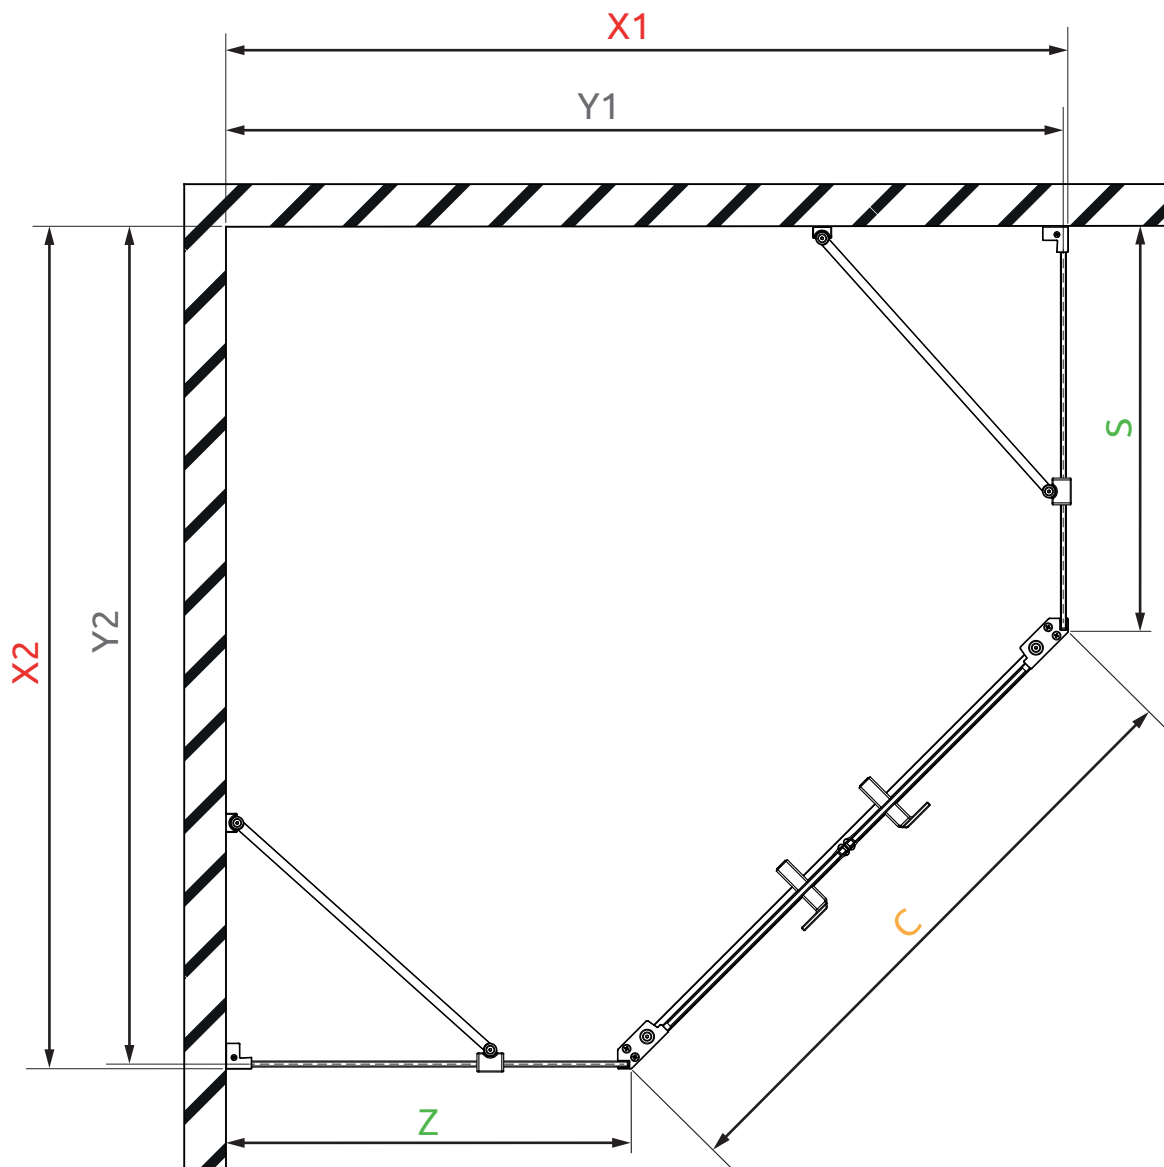

Modell	X1*	X2*	Y1*	Y2*	Z*	S*	C*
PTD 80x80	780	780	775	775	337	337	625
PTD 90x90	880	880	875	875	437	437	625
PTD 100x100	980	980	975	975	537	537	625
PTD 80x90	780	880	775	875	337	437	625
PTD 80x100	780	980	775	975	337	537	625
PTD 90x80	880	780	875	775	437	337	625
PTD 90x100	880	980	875	975	437	537	625
PTD 100x80	980	780	975	775	537	337	625
PTD 100x90	980	880	975	875	537	437	625

*Minden méret a szabványos zuhanykabin beépítésére vonatkozik, a szerelési útmutató szerint
 *All dimensions refer to standard shower installation in accordance with the assembly instruction

